



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P30

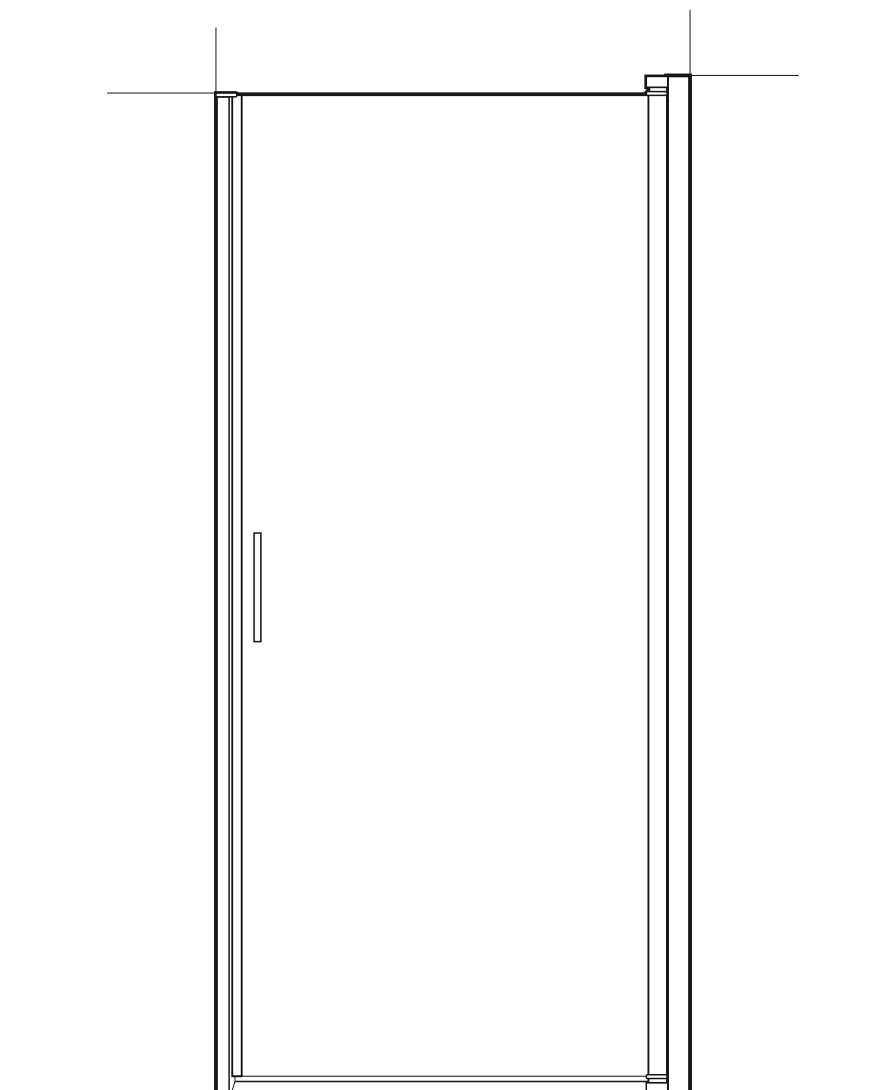




A



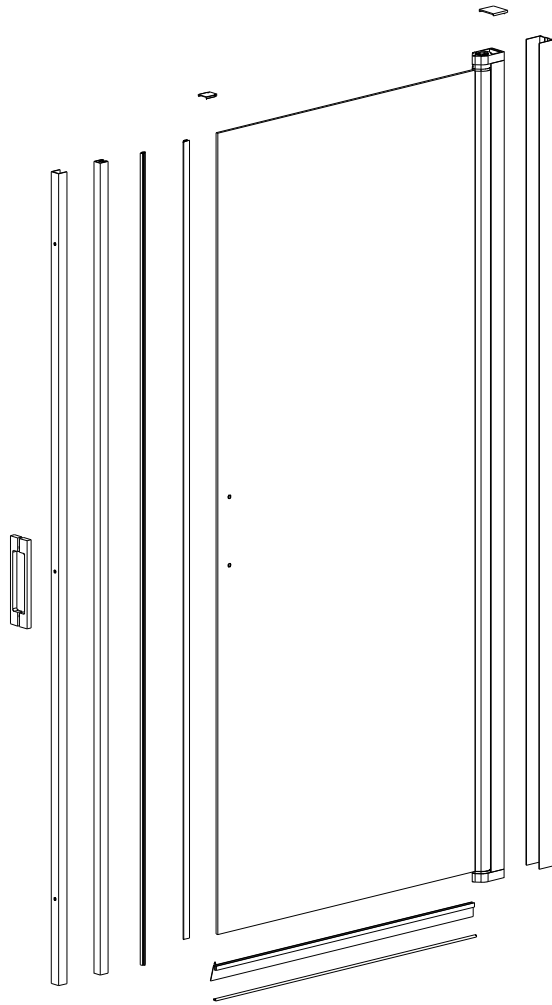


B





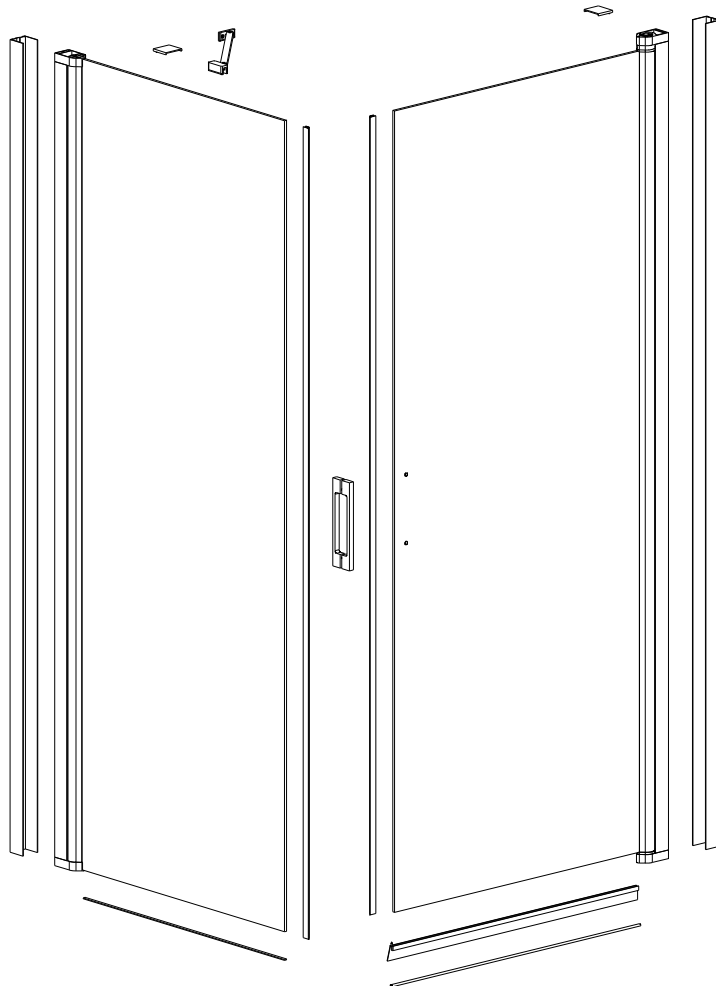





A

M-01		1
M-03		1
M-05		1
M-07		1
M-09	 $\varnothing 6$	6
M-11	 3,5x16	6
M-13		1
M-15		1





M-02		1
M-04		1
M-06		1
M-08	 DIN 7981 4,2x32	6
M-10		6
M-12		1
M-14		1



B


M-01		2
M-03		2
M-05		1
M-07		1
M-09	 $\varnothing 6$	8
M-11	 3,5x16	6
M-17		1
M-19		1

M-02		1
M-04		2
M-06		1
M-08	 DIN 7981 4,2x32	6
M-10		6
M-16	 DIN 7982 4,2x32	2
M-18		1




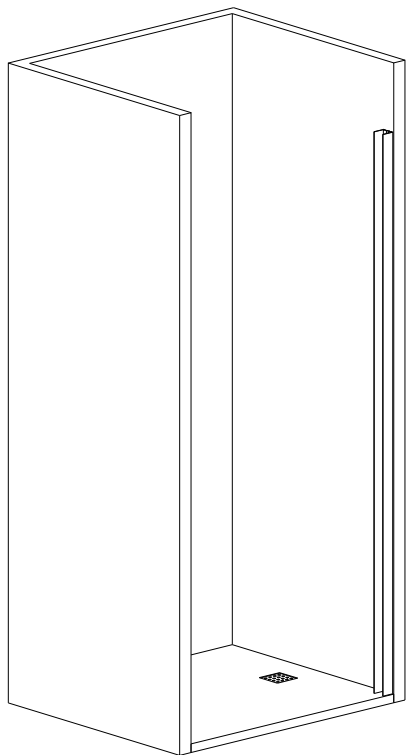
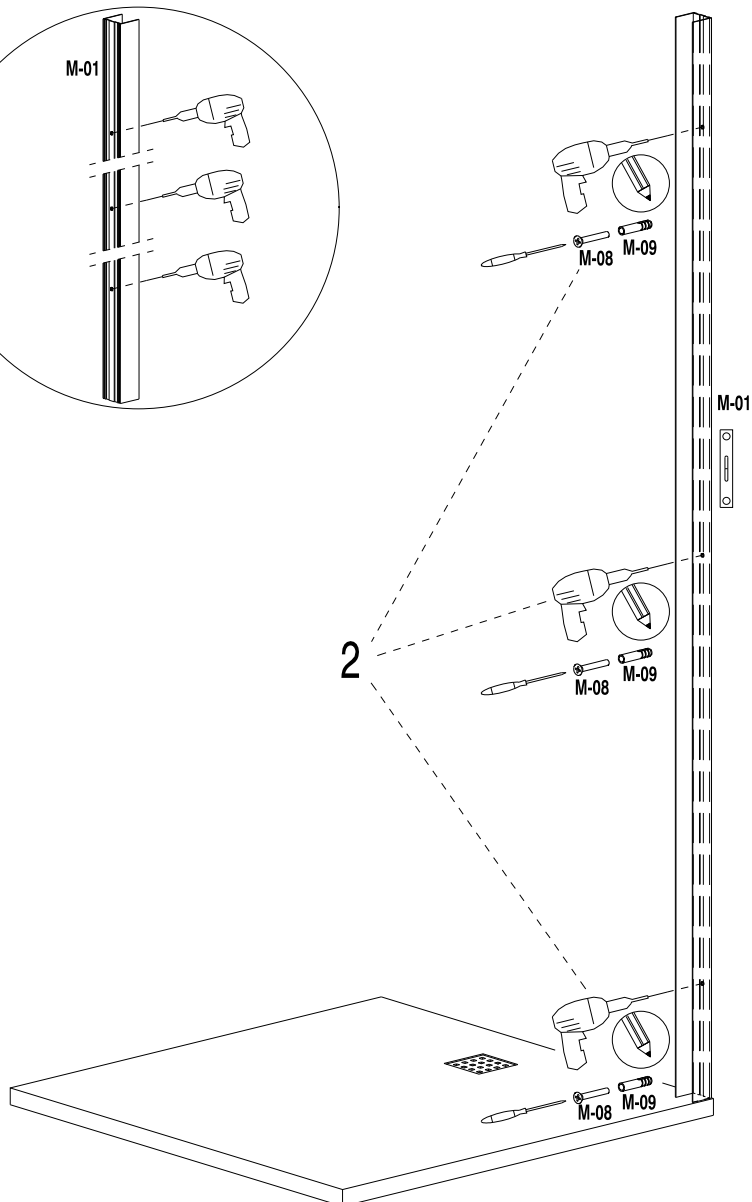
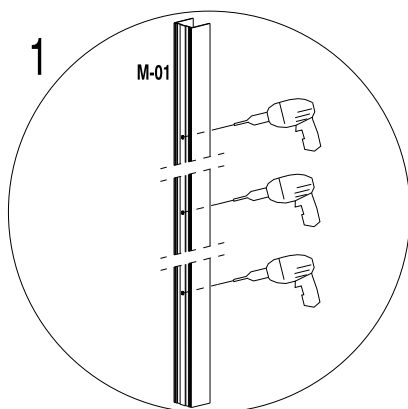
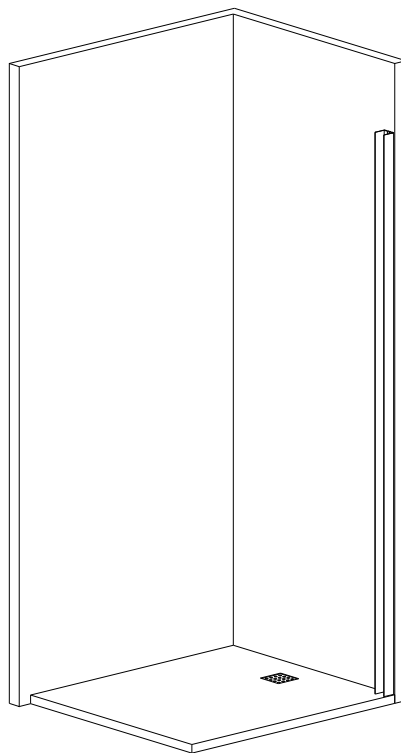


A**B**


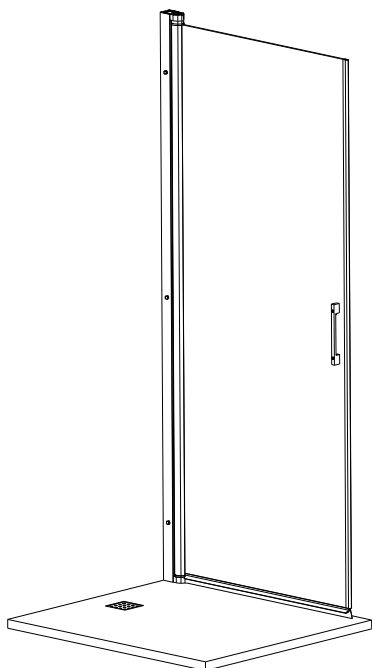
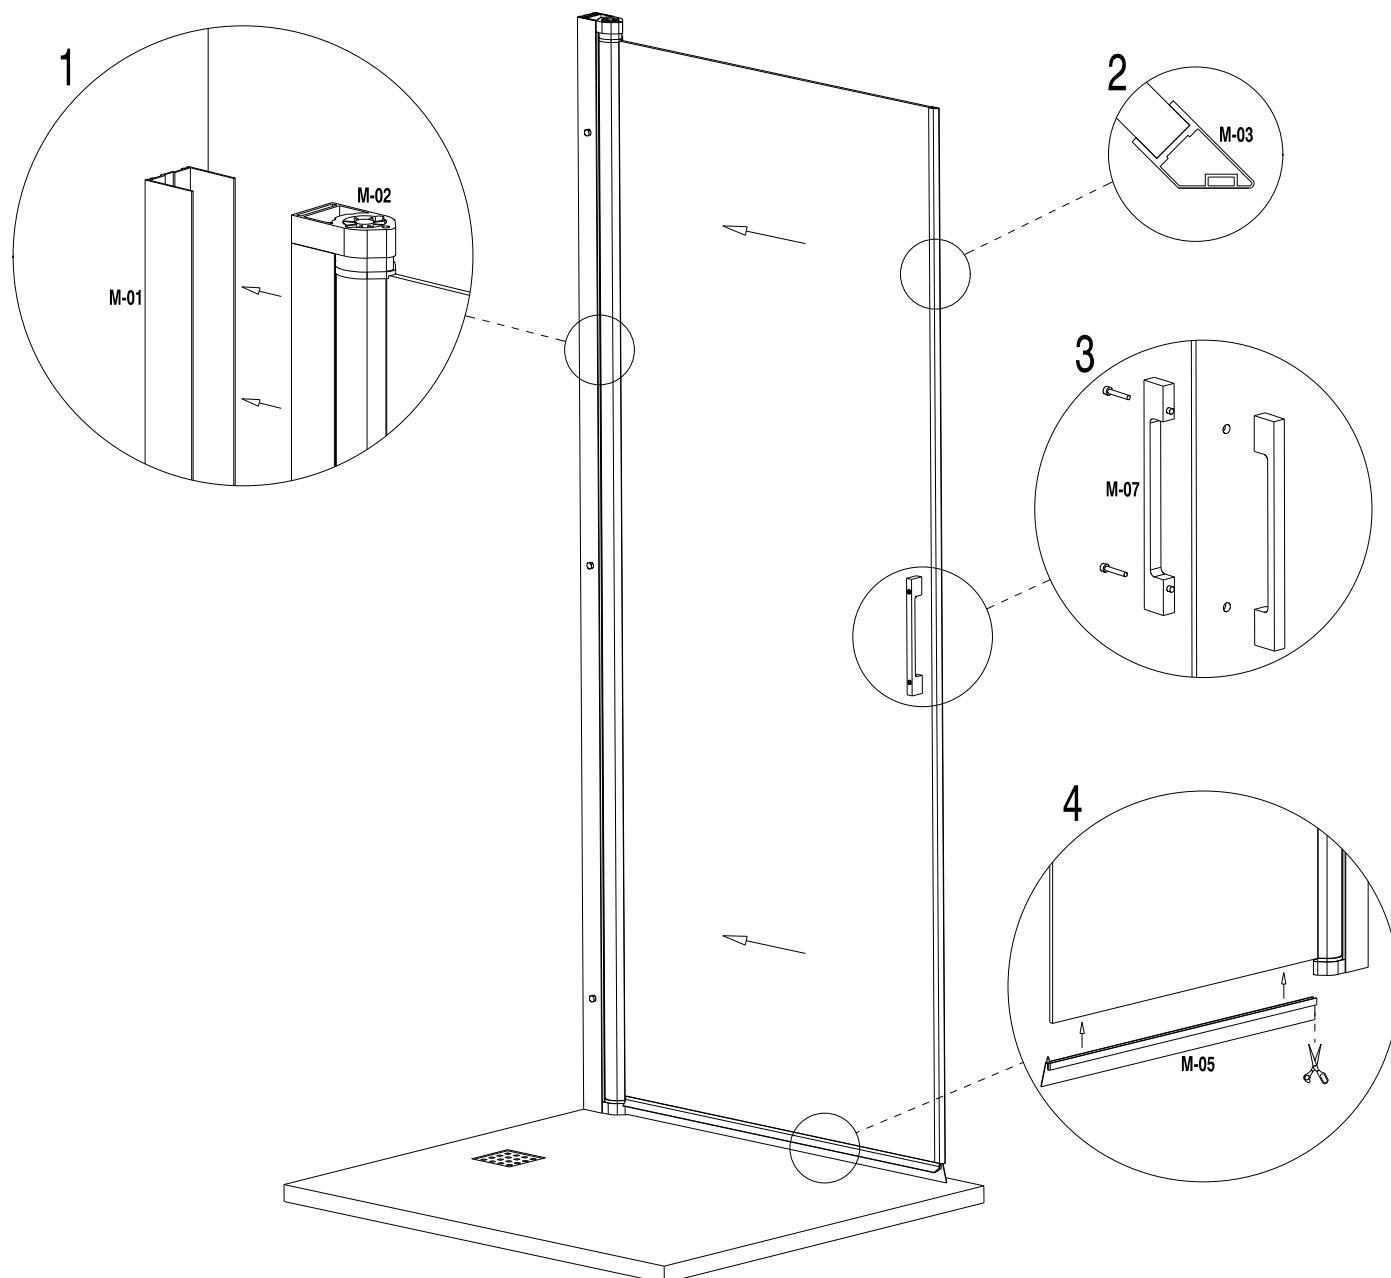
A**B**

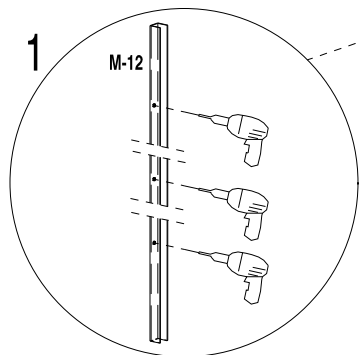



A

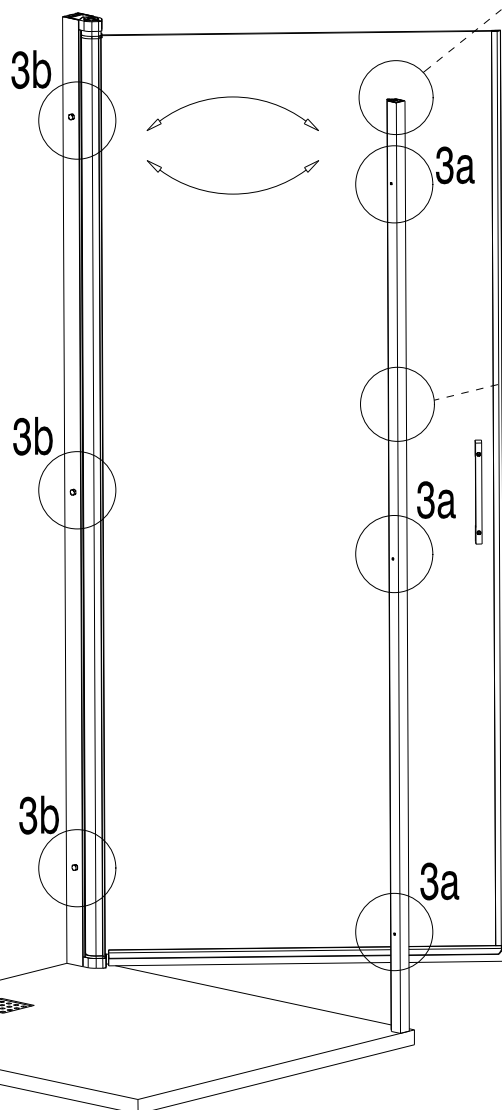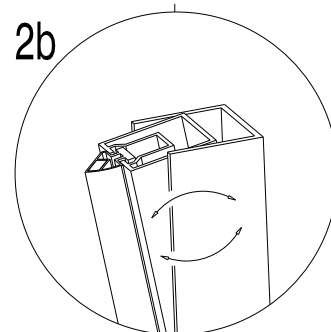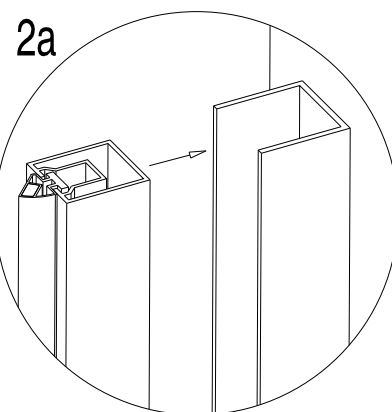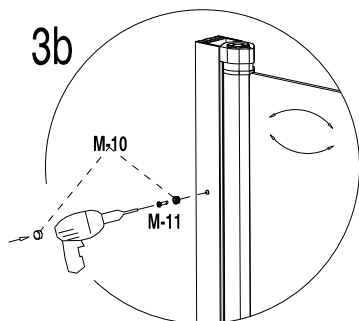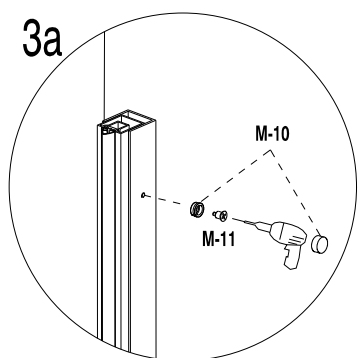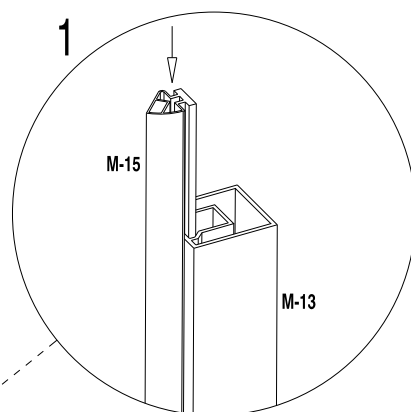
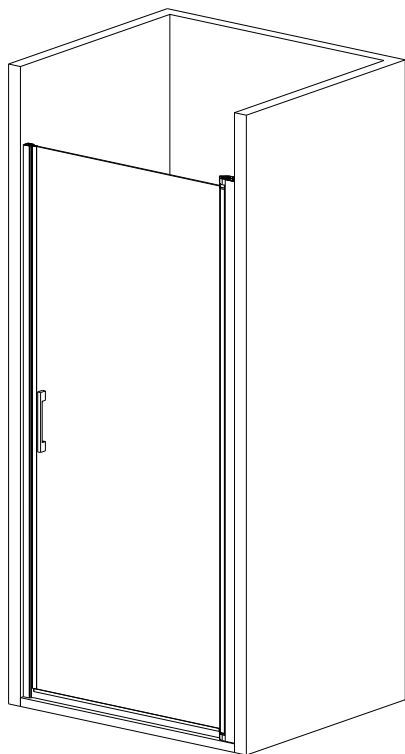


B

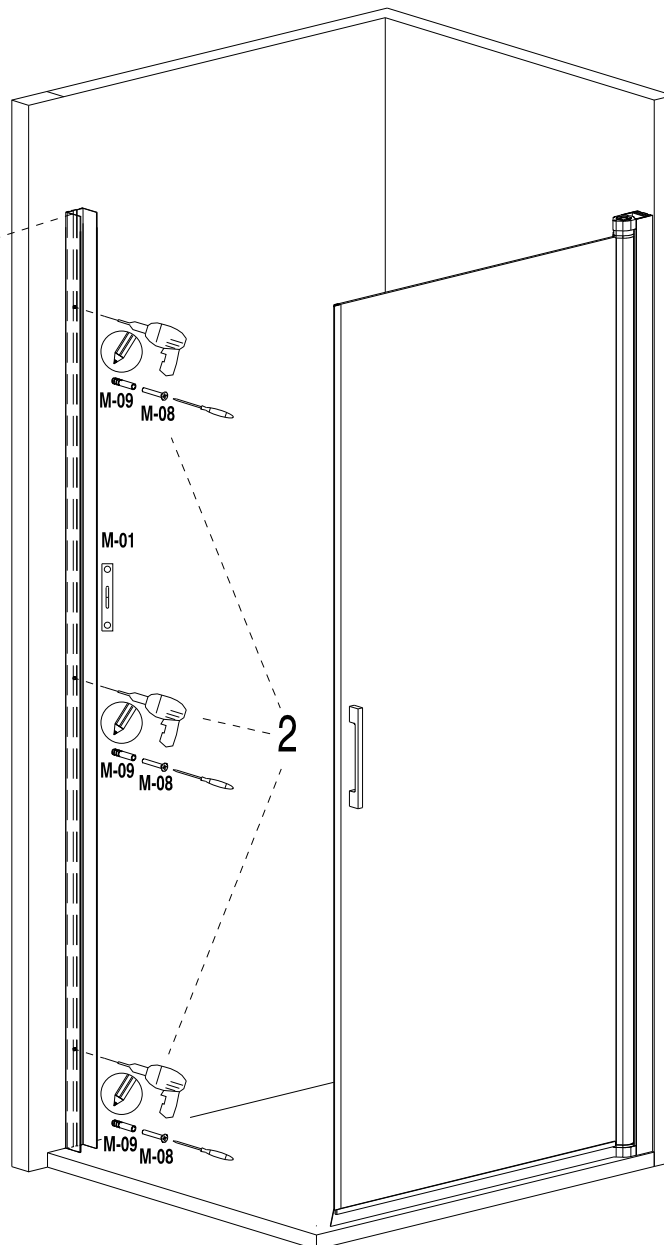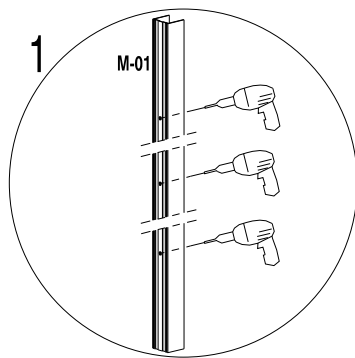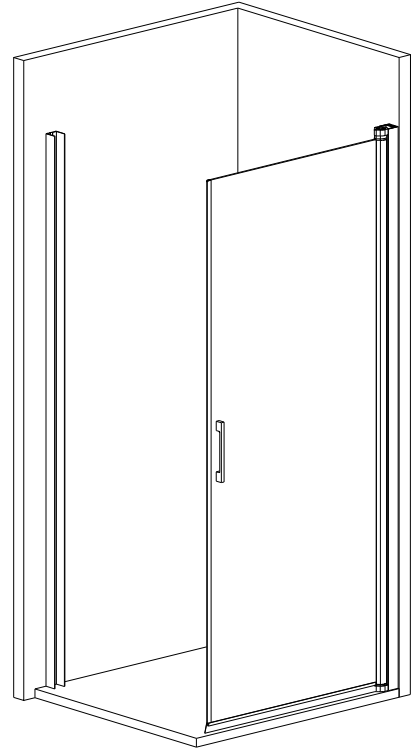


B



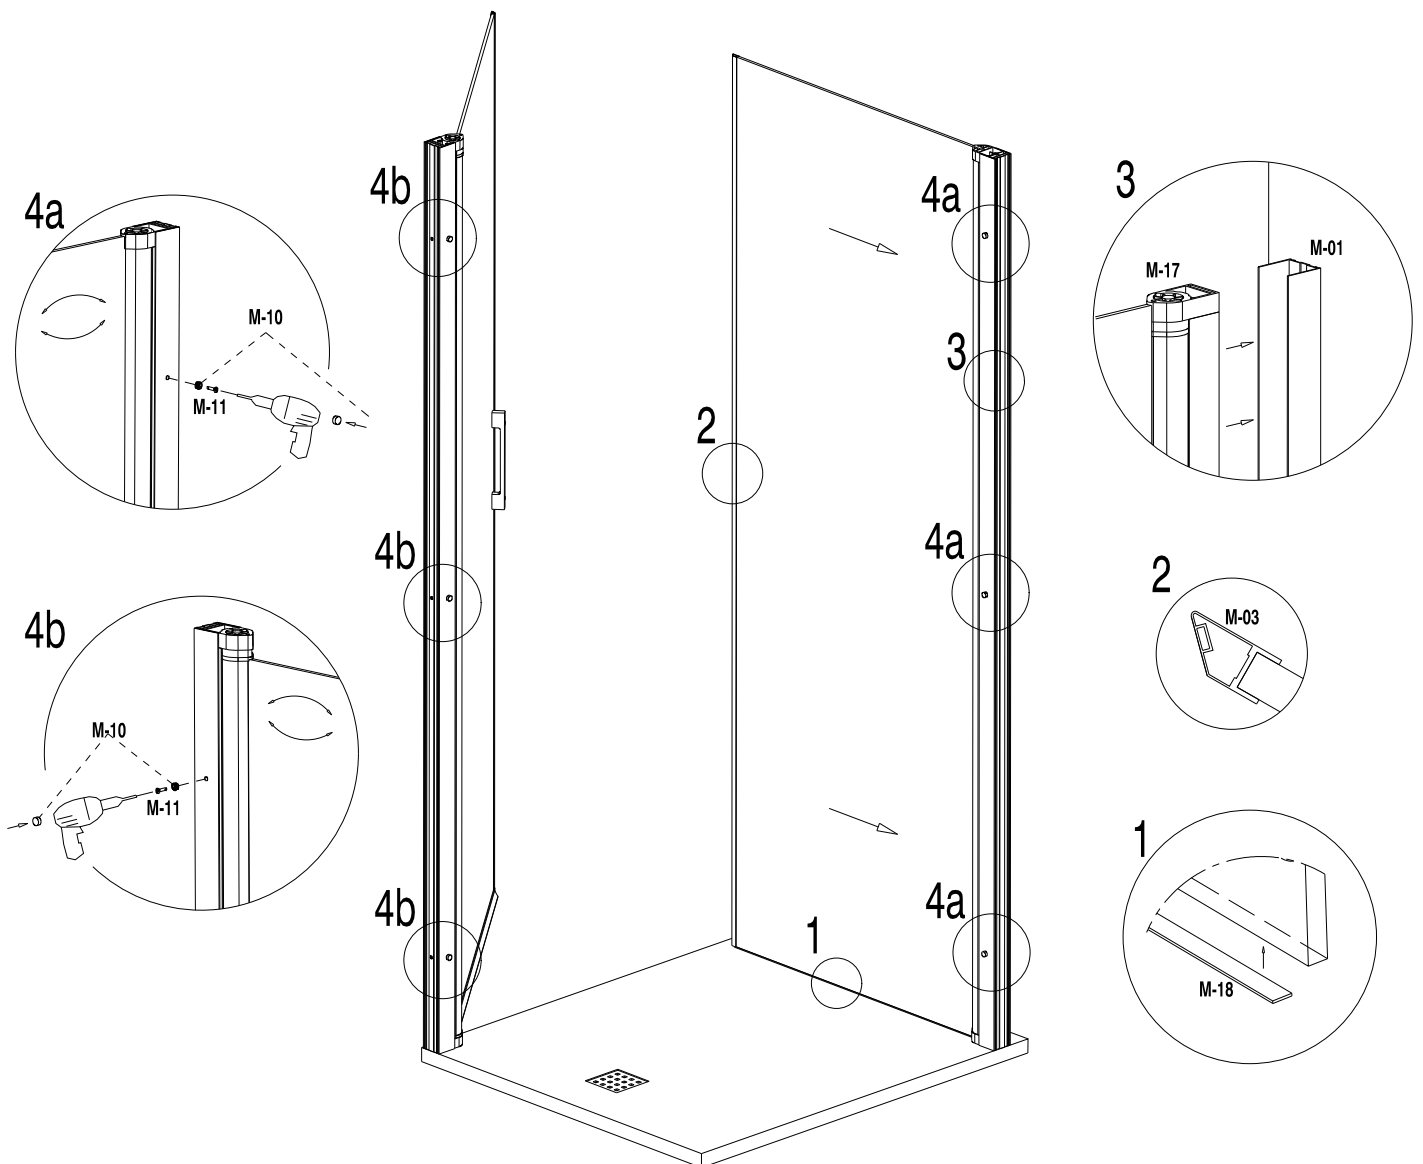
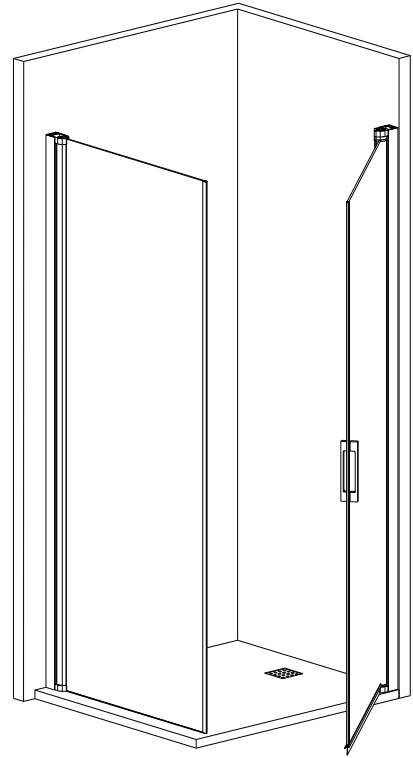


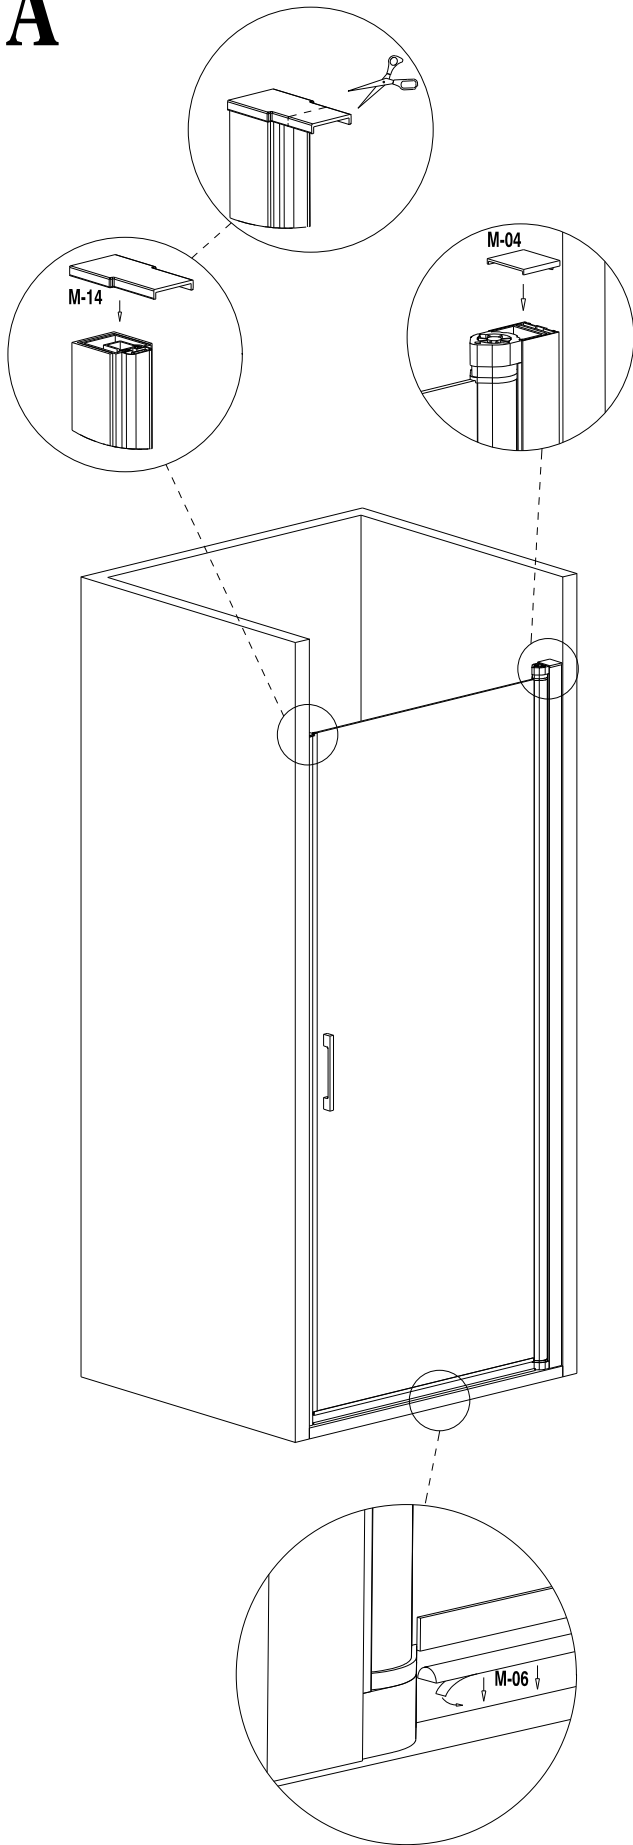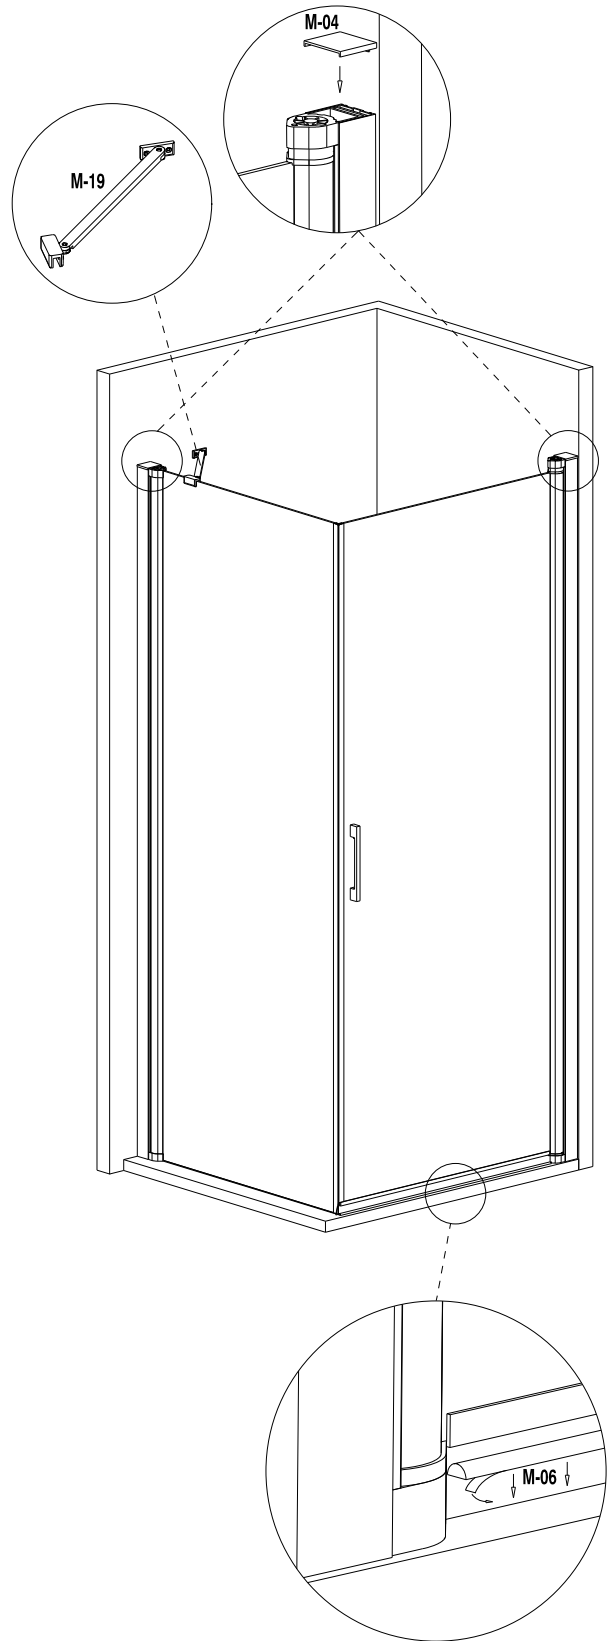A**B**

A

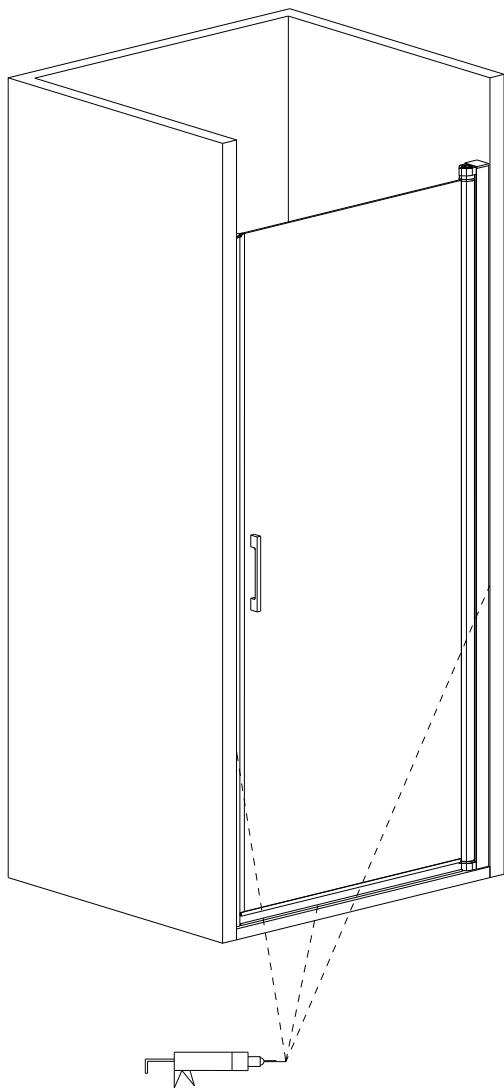

B

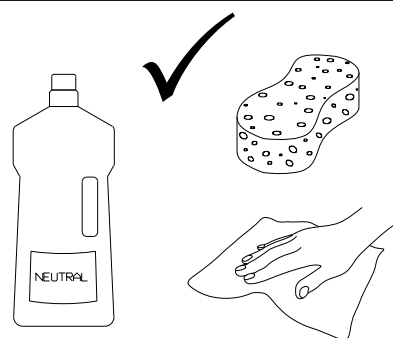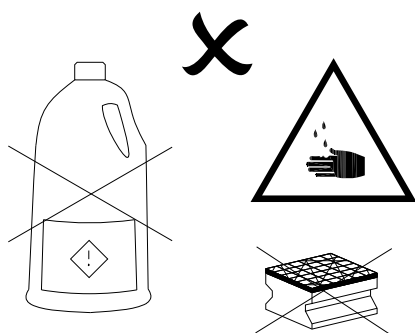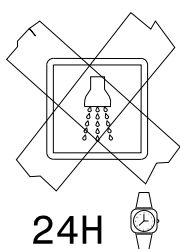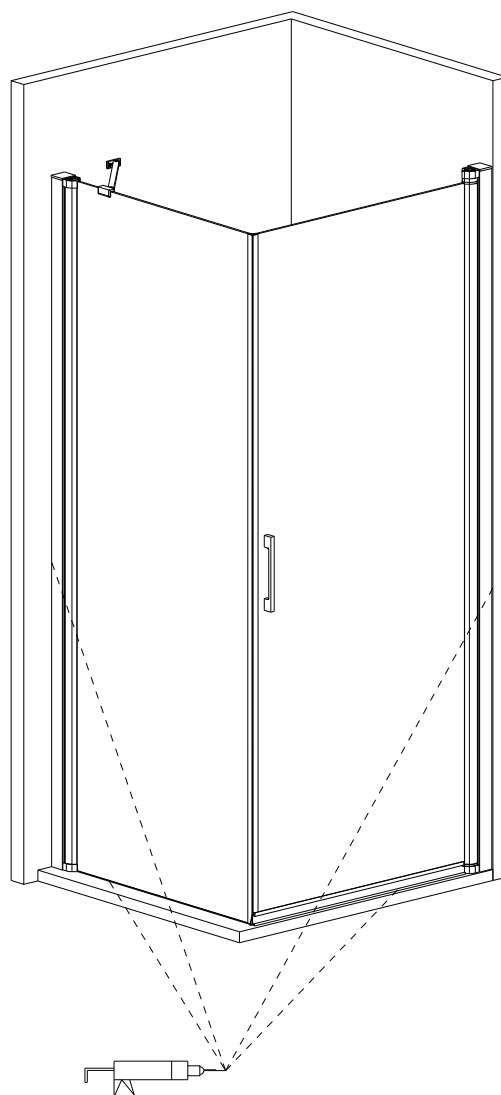



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

