





// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE // // CABINA DOCCIA //DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


## SHAWA D21 Side 1






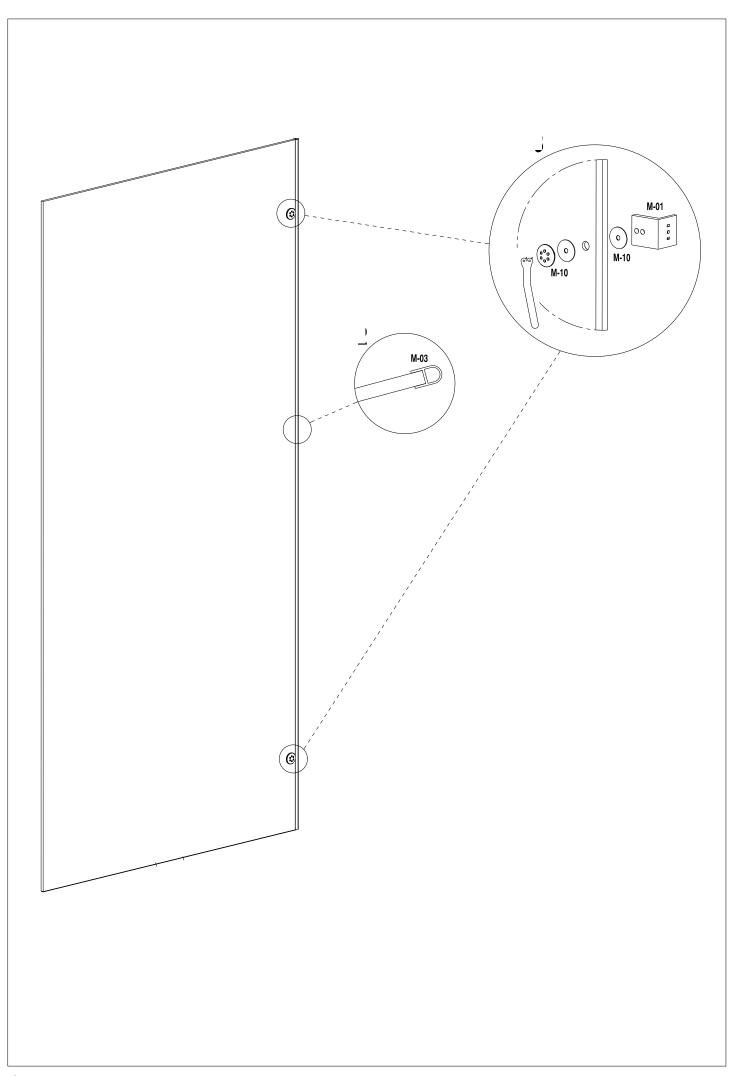

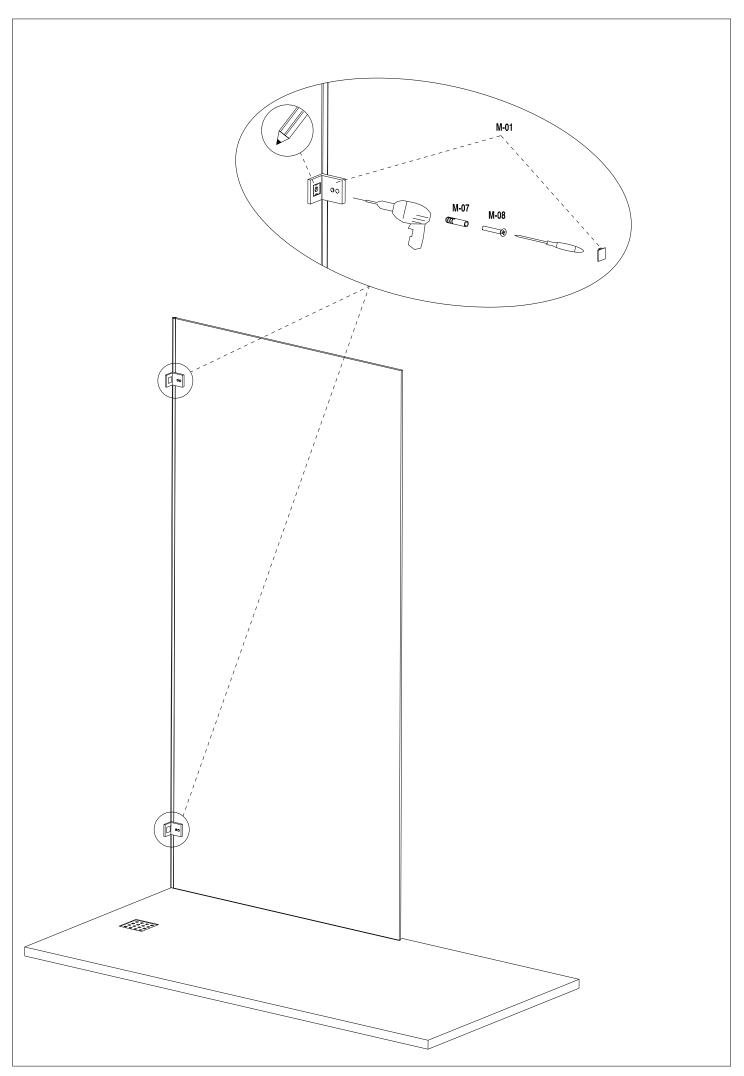

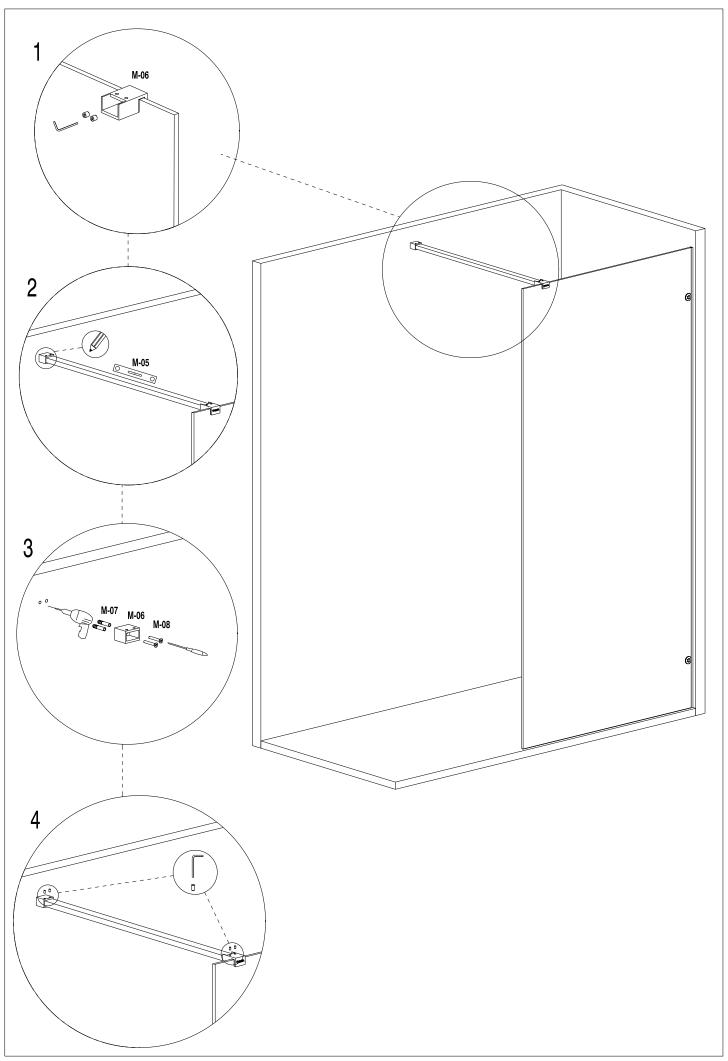

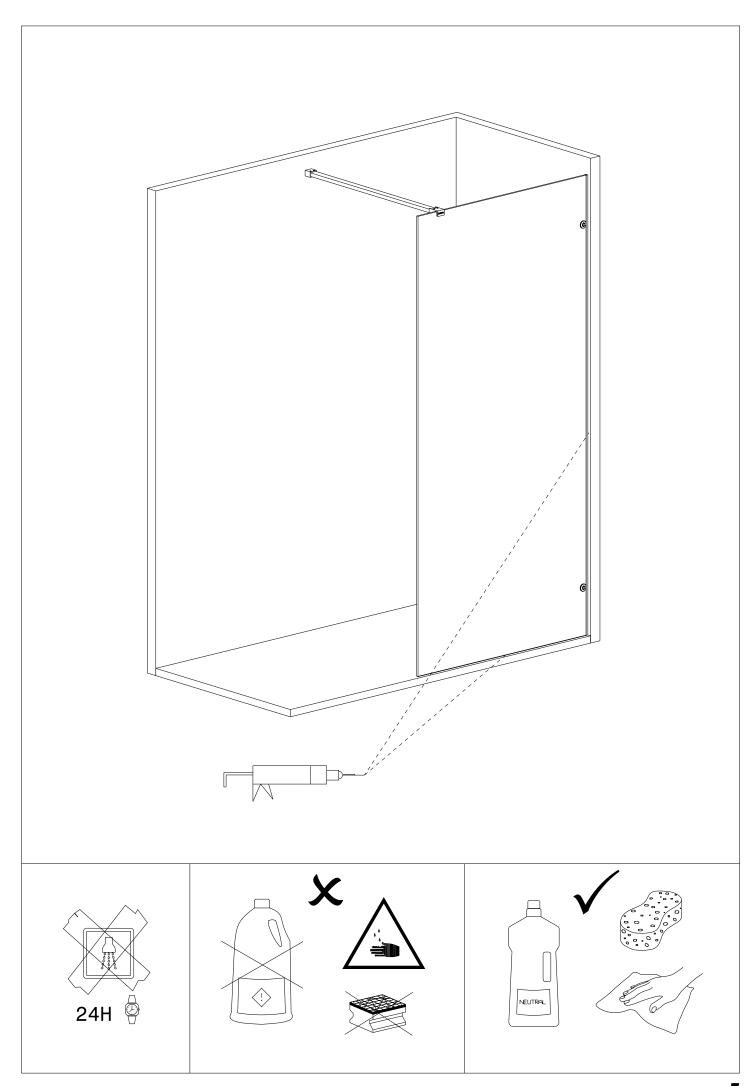























// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE // // CABINA DOCCIA //DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

## SHAWA D21 Side 2

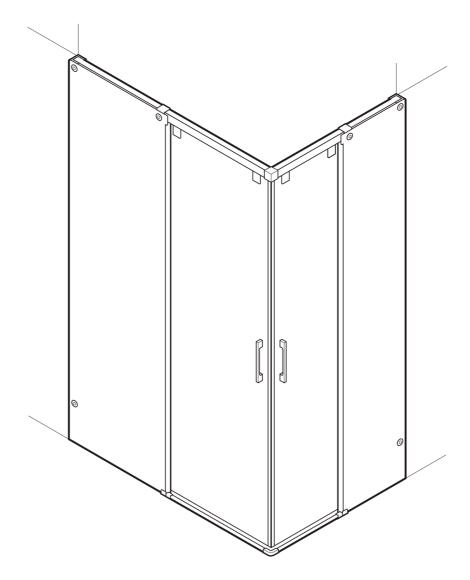

(ES) (FR) (EN)

(DE

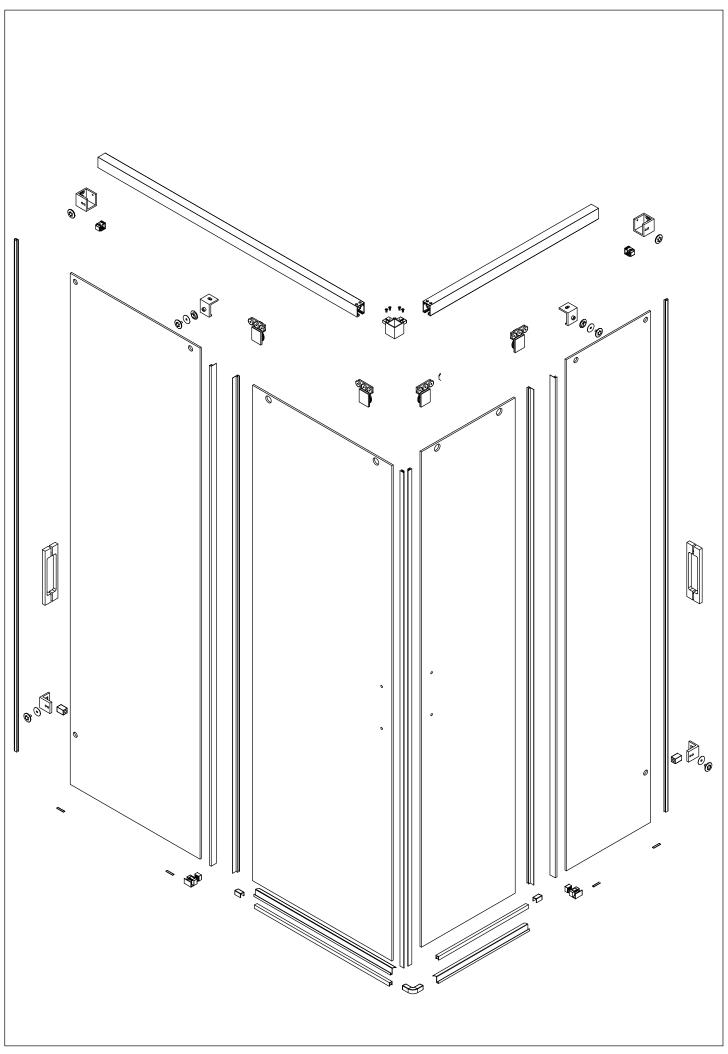

M-01		2		M-02	00	1
M-03		2		M-04		2
M-05		2		M-06	00	2
				M-08		2
M-09	Seo	2		M-10		2
M-11		2		M-12	<sup>©</sup> 00	6
M-13	$\Theta \ \Theta$	1		M-16		2
				M-18		2
M-17	\$	4		M-20		2
M-19	<b>&gt;</b>	2		M-22	0	2
M-21	DIN 7982 4,2x16	4		M-24		6
M-23	DIN 7982 4,2x32	6		M-28	© DIN 7991 M4x10	4
M-27		2		M-30		1
M-29		1				
			o M			<b>□</b> 0

